

PROPANE GAS GRILL INSTRUCTIONS:

• SETUP - FOR OUTDOOR USE ONLY

- Place grill on a level area, clear of any combustible materials.
- Grills without a stand should be placed on a sturdy, level, non-combustible surface that is capable of safely supporting the weight of the grill, its contents and the items being cooked.
- Securely connect the regulator to the propane cylinder and test for leaks according to the instructions in the **PROPANE SAFETY** section of these instructions.
- Place one bag of lava rocks over burners in each section prior to lighting.
- Place cooking grates on the unit.
- We recommend curing your grates by applying a coating of vegetable oil to the grates, then heating the grates for approximately 20 minutes, prior to using the grates for the first time.

• OPERATION

- Prior to opening the main cylinder valve, and lighting the grill, place all control knobs in the **CLOSED** position (turned to the left).
- Open the main cylinder valve. Hold a lit butane lighter gun next to a burner and turn the control knob to **OPEN** (pointing at you). The burner will ignite instantly. The second burner in each section will instantly light by simply turning it on. Since each section is ignited separately, only light the section you are going to use.
- Once burners are lit, adjust the control knobs to your desire temperature.
- When finished cooking close all control knobs, and close the main cylinder valve and disconnect the propane cylinder.
- Clean grates with non-metallic pad, like Scotch-Brite, while grates are still hot. **DO NOT USE A WIRE BRUSH ON STAINLESS STEEL GRATES.**
- Cast Iron Grates must be protected from moisture and stored with a coating of vegetable oil to prevent rusting.

• PROPANE SAFETY

- Never use or store cylinders indoors.
- Keep main cylinder valve securely closed when not in use. **WARNING:** Propane tank valves are designed to work completely open and/or completely closed. Never just crack the valve.
- Always position the LP cylinder so that the connection between the valve and the regulator will not cause sharp bends in the hose.
- The POL connector on the regulator screws in to the valve outlet of a 30 lb. LP cylinder by turning counterclockwise (to the left) only.
- Make sure the connector is free from scratches or nicks which can cause leaks.

• **DISCONNECTING AND TRANSPORTING CYLINDERS FOR REFILLING:**

- Turn off all control knobs and close the main cylinder valve.
- Place cylinder plug snugly in the main cylinder valve outlet.
- Always transport and store LP cylinders in a secured, upright position.
- Never keep propane cylinders in a hot car or truck. Heat could cause the relief valve to discharge propane and create a very dangerous situation.

